


INSTALLATION INSTRUCTIONS: FX—FIRE RATED EXTINGUISHER CABINETS

1. With metal or wood studding, install a framed opening at specified location. Wall opening width, height and depth must correspond with dimensions indicated in catalog or detail and submittal sheet.
2. Frame in above, below and at both sides of cabinet opening.
NOTE: On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
3. Drill 3/16" (0.5 cm) hole at least every 12" (30.48 cm) on each side of cabinet through the double tub construction for mounting into wall opening.
4. Place cabinet in position and mark location of attachments on studding using 3/16" (0.5 cm) holes as marking guides.
5. Remove cabinet and drill 5/32" (0.4 cm) holes through studs at marked points; six attachment holes for 2000 series cabinets and smaller, eight attachment holes for larger cabinets.
6. Place cabinet in position and attach with Universal # 10 x 2-1/2" (6.4 cm) self-drilling screws.
7. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking of tub at attachments of studding.

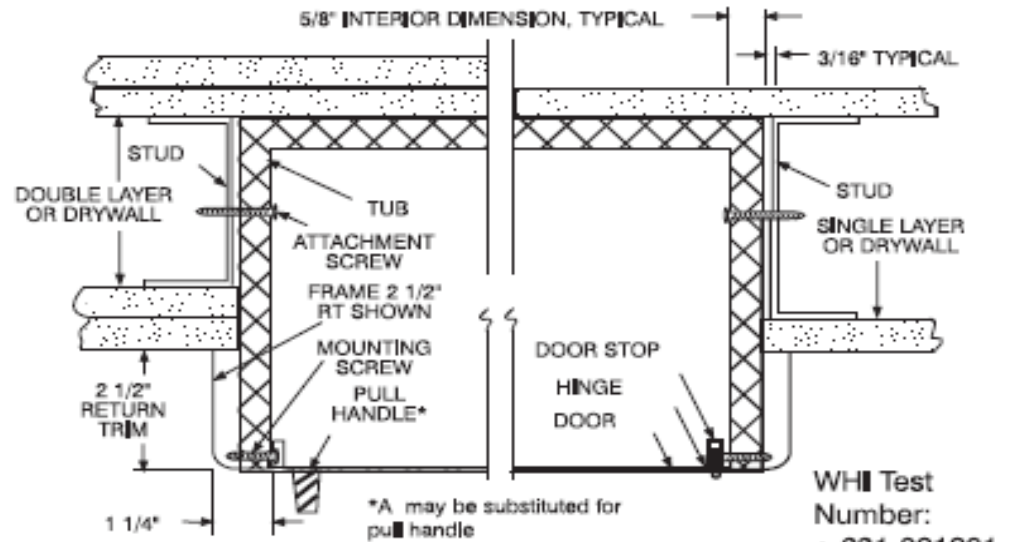

* FOR APPLICABLE RESTRICTIONS, SEE THE Fire-FX™ OPTION DETAIL

WHI Test
Number:
• 631-021201
• 631-021202

NOTE: The installation of any fire-rated cabinet which lacks a cabinet door, or any condition in which the door is left ajar, will void the fire rating



JL INDUSTRIES

ACTIVAR
INC.

Construction Products Group

A DIVISION OF

www.activarcp.com

INSTALLATION INSTRUCTIONS: FX—FIRE-RATED FIRE EXTINGUISHER CABINETS

HEADQUARTERS: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: JL@JLINDUSTRIES.COM WWW.ACTIVARCPG.COM
ACPG WEST COAST (SAMSON PRODUCTS): COMMERCE, CA PH: 323-726-9070 FAX: 323-726-9068 • ACPG SOUTHEAST (THOMAS ENTERPRISES): FT MEYERS, FL PH: 239-693-7500 FAX: 239-693-7501