

OPERATION & MAINTENANCE INSTRUCTIONS - ROOF HATCHES

JL INDUSTRIES, INC. ROOF HATCH OPERATION AND MAINTENANCE INSTRUCTIONS

Operation

CAUTION: LID IS SPRING LOADED. Please open lid with caution


From the inside, roof hatch is opened by turning the inside handle one-quarter turn, and pushing up until the hold-open arm locks.

From the outside, the procedure is the same, pulling instead of pushing.

The hatch cover is most safely closed from the inside. The hold-open arm is released by pulling the red vinyl grip forward. The hatch cover is then closed and latched by means of the inside handle.

Maintenance

At least once per month, the hatch cover should be opened and closed to ensure proper function of the compression cylinders. During this procedure, the top of the curb should be cleaned as necessary to maintain a tight seal with the hatch cover when closed

 <p>JL INDUSTRIES</p> <p>A DIVISION OF ACTIVAR INC. <small>www.activarcp.com</small> Construction Products Group</p>	<h2>CLEANING INSTRUCTIONS - ROOF HATCHES</h2>
<p>HEADQUARTERS & CUSTOMER SERVICE: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: SALES@JLINDUSTRIES.COM WWW.ACTIVARCPG.COM ACPG SOUTHEAST (THOMAS ENTERPRISES): FT MEYERS, FL PH: 239-693-7500 ACPG WEST COAST (SAMSON MFG): COMMERCE, CA ACPG WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL</p>	